


Modern Office 6900 Shady Oak Road, Ste 120 Eden Prairie, MN 55344 Phone: 800.443.5117 (In MN): 952-941-2837 Fax: 952.949.9816 www.modernofficefurniture.com


## Bravo Club Chair Leg Attachment Instructions

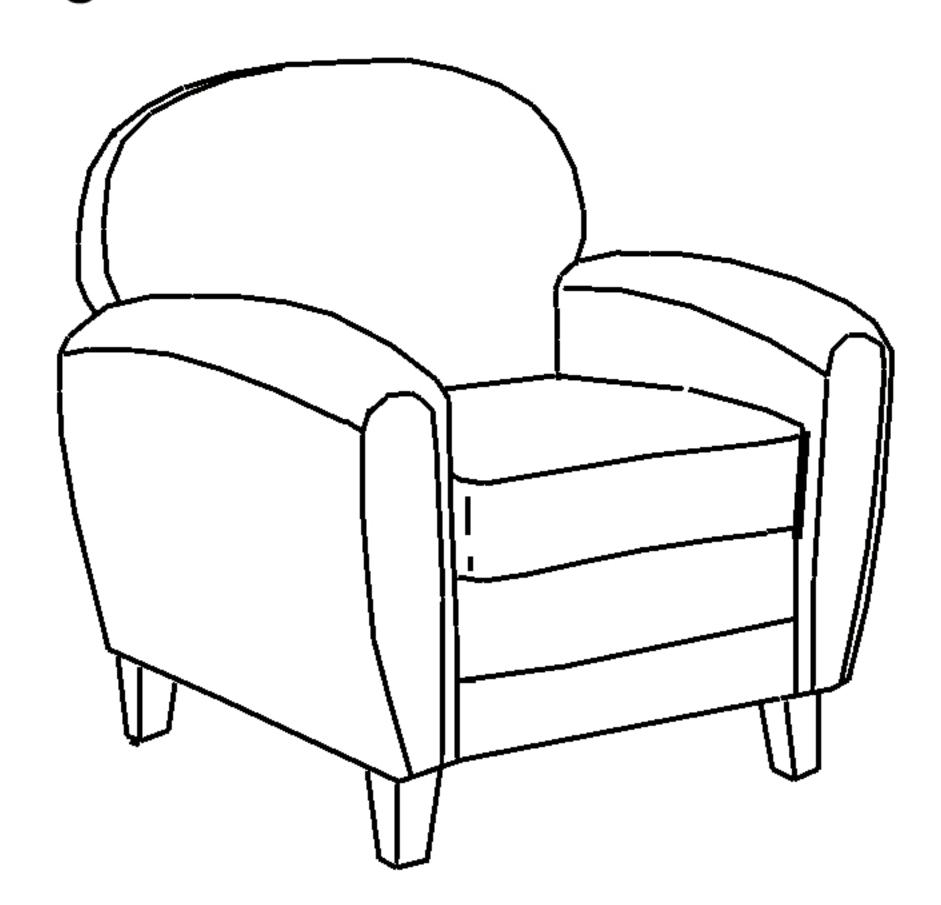


\*\*\*\*Caution\*\*\*\*

Connect each leg with the bolt and allen head wrench provided. It is important to guide bolt straight and very gently turn bolt to make sure it is threading properly into insert. If it does not thread properly, you will not be able to properly tighten bolt and it may strip insert from underside of chair. If it does not feel like it is smoothly threading into insert, back screw out and start over. Do not twist wood leg.

Assemble leg so that the white cap faces out:

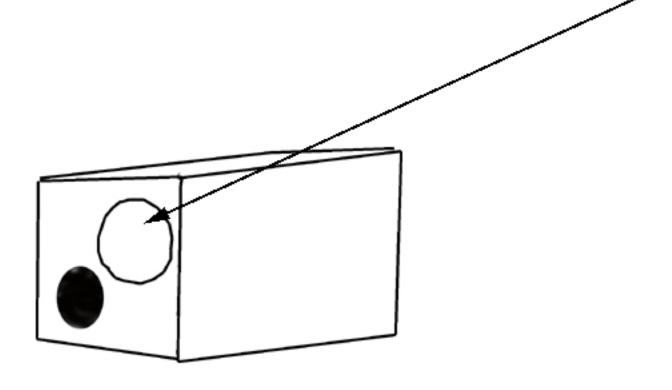

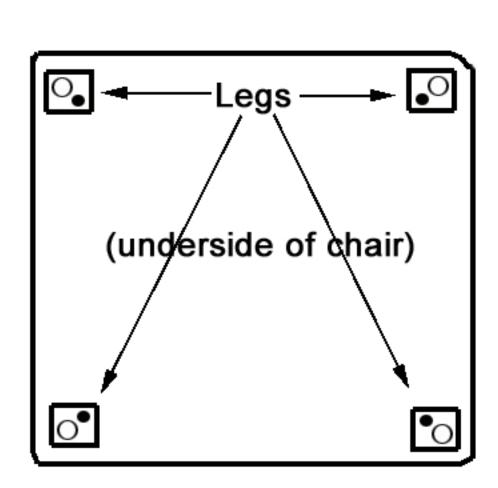

white caps facing out